



Balcony Barbie

Instruction Manual



**Model
EBB 001**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure they do not play with the appliance.

WARNING:

Charcoal or similar combustible fuels must not be used with this appliance.

The appliance should be supplied through a residual current device (RCD) having a rated residual operation current not exceeding 30mA.

The supply cord should be regularly examined for signs of damage and the appliance is not to be used if the cord is damaged.

Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - Building Regulations
- DO NOT immerse the appliance in water.
- Some surfaces become hot during operation - take care when using the appliance.
- Always switch off and disconnect the power supply to the appliance when not in use.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- This appliance is not suitable for use by children.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Product Description

- **EBB 001** - Outdoor Electric BBQ (Mild Steel plate. Cooking Area: 520mm x 330mm)

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Excelsior product.

Pack Contents

The following is included:

- Excelsior BBQ
- Waste Tray
- Instruction Manual

GBI Sales prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your Excelsior dealer immediately.

Operation



Seasoning the Cooking Plate

Before using for the first time the cooking surface needs to be seasoned.

1. Ensure the cooking surface is clean, with Eucalyptus oil or similar.
2. Brush the surface with cooking oil.
3. Set the thermostat to 110°C and turn the appliance On. The power indicator light turns on.
4. Once the appliance reaches temperature the power indicator light turns off.
5. Turn the appliance Off and allow to cool before wiping away any excess oil.
6. The appliance is now ready to use.

Cooking

1. Connect the appliance to the mains power supply.
2. Set the thermostat to the desired temperature (60°C-300°C). The power indicator light comes on and the appliance begins to heat up.



Note: 200°C to 220°C is suitable for general cooking.

3. The power indicator light turns off when the appliance has reached the set temperature.



Note: Excelsior recommend the cooking surface is lightly oiled before cooking.

4. Place the foodstuffs on the cooking plate and cook as required.

Cleaning, Care & Maintenance

If grease is permitted to accumulate, it will begin to carbonise into a hard substance that is extremely difficult to remove. To prevent this follow the cleaning steps below:


- Always turn Off the appliance and disconnect from the power supply before cleaning.
- Allow the appliance to cool before cleaning.
- Use warm, soapy water and a damp cloth to clean the exterior of the appliance.
- Take care when using scrapers to remove cooking residues as they can damage the cooking surface.
- Dry thoroughly after cleaning.
- A qualified electrician should carry out repairs if required.
- **After every use, clean the cooking surface thoroughly and leave coating of oil on surface to protect from surface rust.**

Scraping

After each use, scrape the appliance with a scraper/grill stone/copper brush or flexible spatula to remove excess fat and food. A waste tray is provided for the scrapings if necessary.

If there is an accumulation of burned fat or food, the cooking surface should be thoroughly scoured and re-seasoned. .


 **NOTE: IT IS VITAL THAT THE COOKING SURFACE IS RE-SEASONED AFTER SCOURING.**

 **WARNING: DO NOT USE STEEL WOOL AS IT MAY LEAVE SHARDS THAT COULD CONTAMINATE FOOD.**

Waste Tray

These appliances feature a waste tray to collect any liquid or fats that run off during cooking.

After every use, remove and empty the grease tray before washing with warm soapy water. Do not allow the tray to overfill or excess grease will run out of the overflow hole at the front of the tray.

 **WARNING: DO NOT remove the tray during or immediately after use as the contents will be hot.**

Troubleshooting

If your Excelsior appliance develops a fault, please check the following table before making a call to the Helpline.

Fault	Probable Cause	Action
The appliance is not working	The appliance is not switched on	Check the appliance is plugged in correctly and switched on
	Plug and lead are damaged	If within Warranty period, return to place of purchase for replacement
	Fuse has blown	If within Warranty period, return to place of purchase for replacement
	Power supply	Check power supply
	Internal wiring fault	Call agent or qualified electrician
Appliance does not reach set temperature	Faulty thermostat	Call agent or qualified electrician
	Faulty element	Call agent or qualified electrician
Appliance heats up but indicator light does not come on	Bulb has expired	Call agent or qualified electrician
Power indicator light comes on but appliance does not heat up	Faulty element	Call agent or qualified electrician
	Faulty thermostat	Call agent or qualified electrician
	Thermostat set incorrectly	Check thermostat
Appliance slow to heat up	Cooking surface not clean	Clean cooking surface
	Faulty element	Call agent or qualified electrician

Technical Specifications

Model	Voltage	Power	Current	Cooking Surface Dimensions w x d (mm)	Dimensions h x w x d (mm)	Weight (kg)
EBB 001	220-240V	2200W	9.6A	520 x 330	185 x 523 x 439	21.5

Electrical Wiring

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



Parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

Excelsior products have been approved to carry the following symbol:



 
All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of GBI Sales.

Every effort is made to ensure all details are correct at the time of going to press, however, GBI Sales reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

Equipment Type	Outdoor Electrical BBQ
Model	EBB 001
Standards	AS/NZ 3820 Essential Safety Requirements for Low Voltage Electrical Equipment EN 55014-1:2006 + A1:2009+A2:2011 EN 61000-3-2:2014 EN 61000-3-3:2013 EN 55014-2:2015 AS/NZS 60335-1:2011+A1 to A4 AS/NZS 60335-2-78:2005 +A1 & A2
Producer Name	Excelsior
Producer Address	78 Mallard Way Cannington WA 6107
Producer Telephone	(08) 9478 0466

I, the undersigned, hereby declare that the equipment specified above conforms to the above Legislation and Standard(s).

Date	26/09/11
Signature	
Full Name	Richard Cromwell
Position	Marketing Director